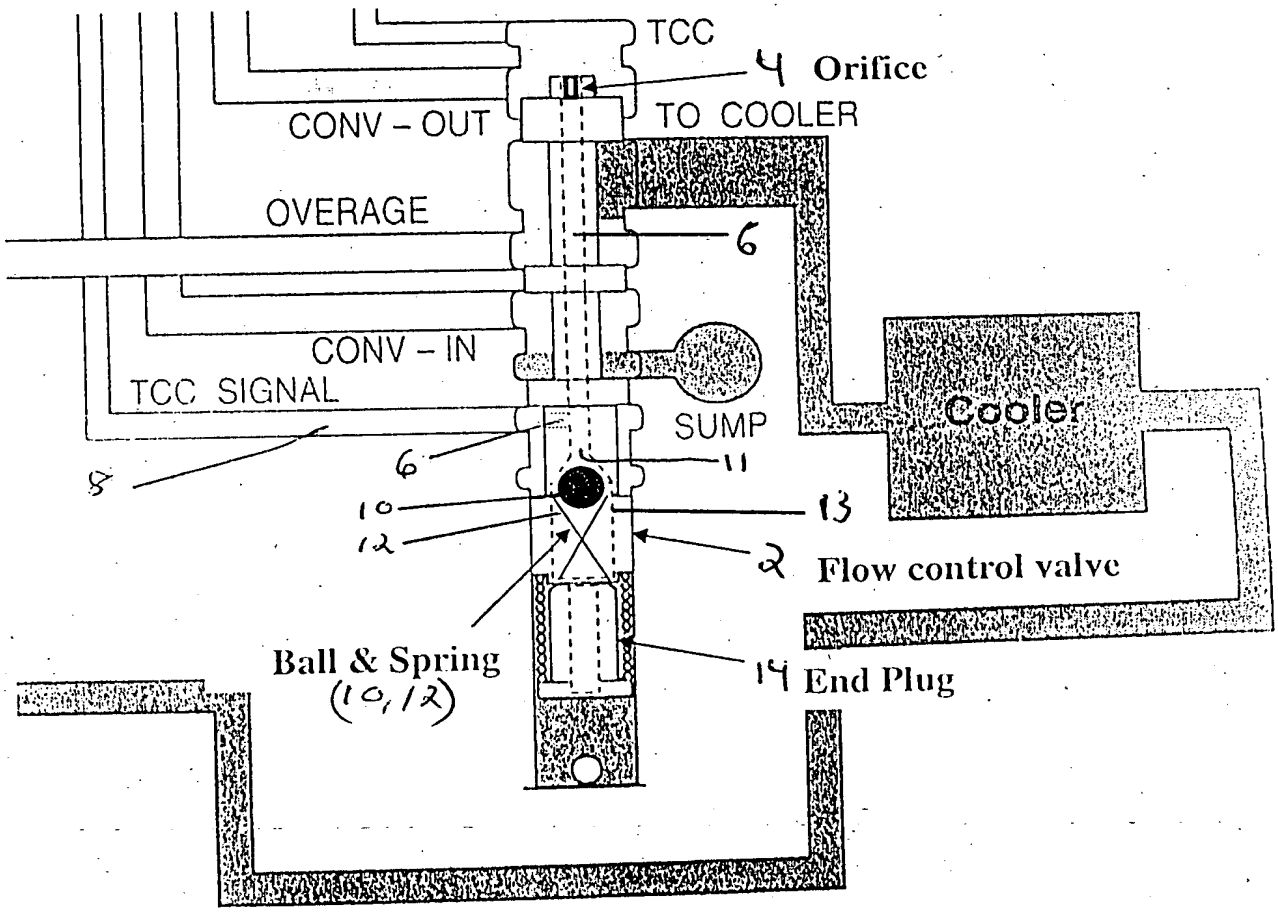
TCC
4 Orifice
CONV – OUT
TO COOLER
OVERAGE
6
CONV – IN
TCC SIGNAL
SUMP
Cooler
8
6
11
10
13
12
2 Flow control valve
Ball & Spring
(10, 12)
14 End Plug

FIGURE 1

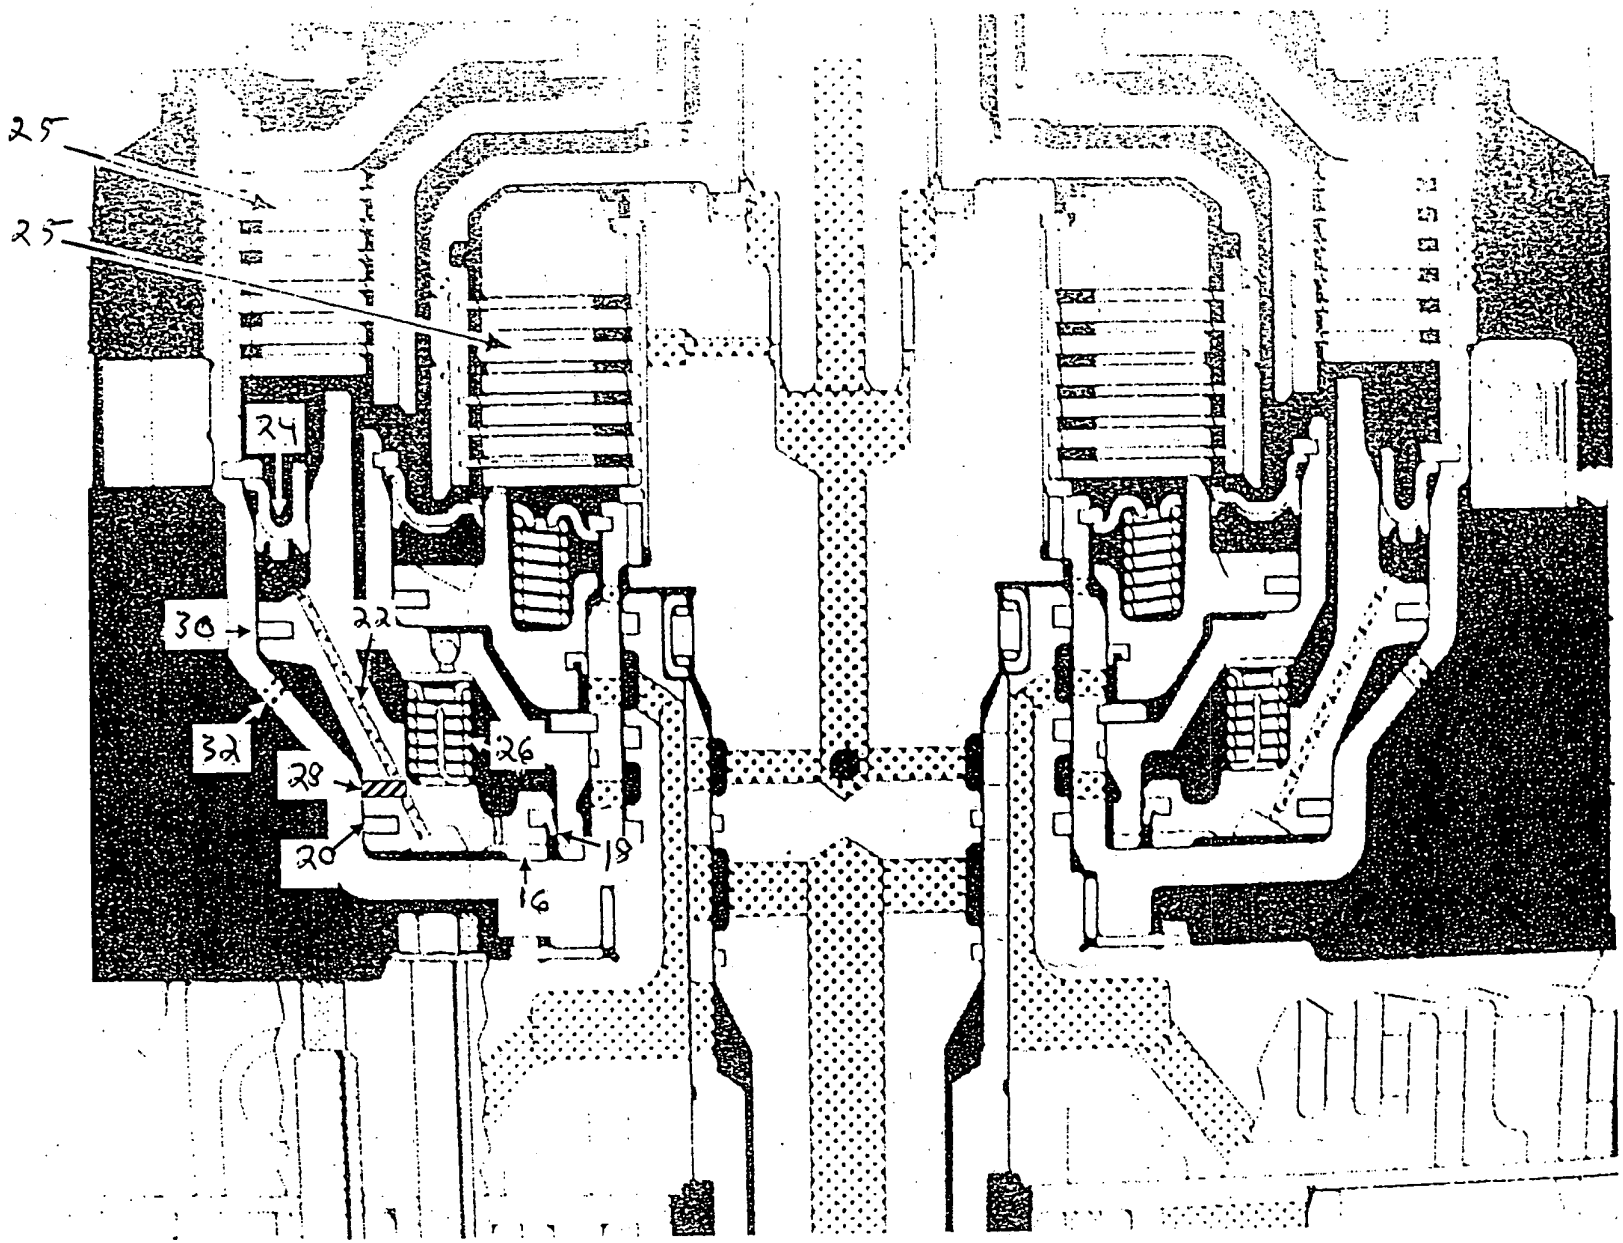

FIGURE 2

FIGURE 3

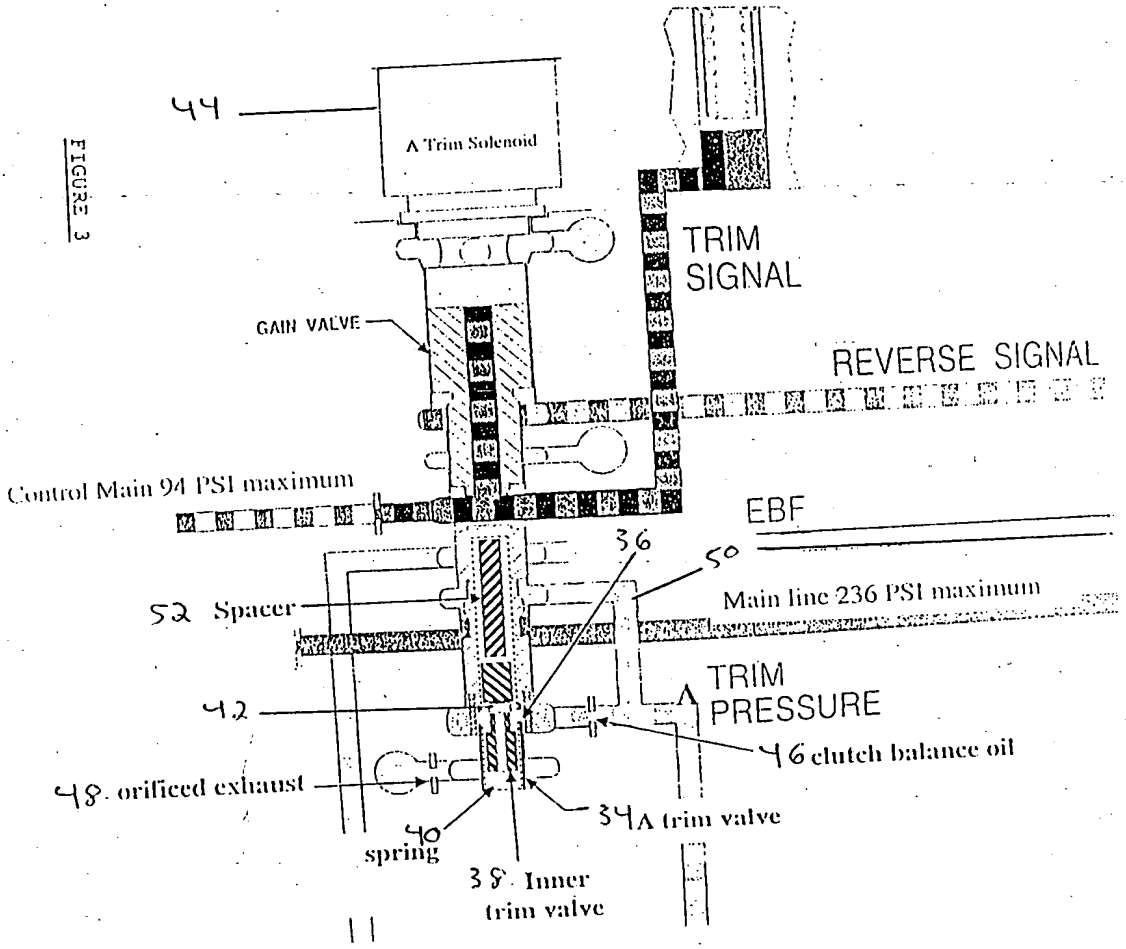
44
A Trim Solenoid
TRIM SIGNAL
GAIN VALVE
REVERSE SIGNAL
Control Main 94 PSI maximum
EBF
36
50
52 Spacer
Main line 236 PSI maximum
TRIM PRESSURE
42
46 clutch balance oil
48. orificed exhaust
34 A trim valve
40 spring
38. Inner trim valve

FIGURE 4

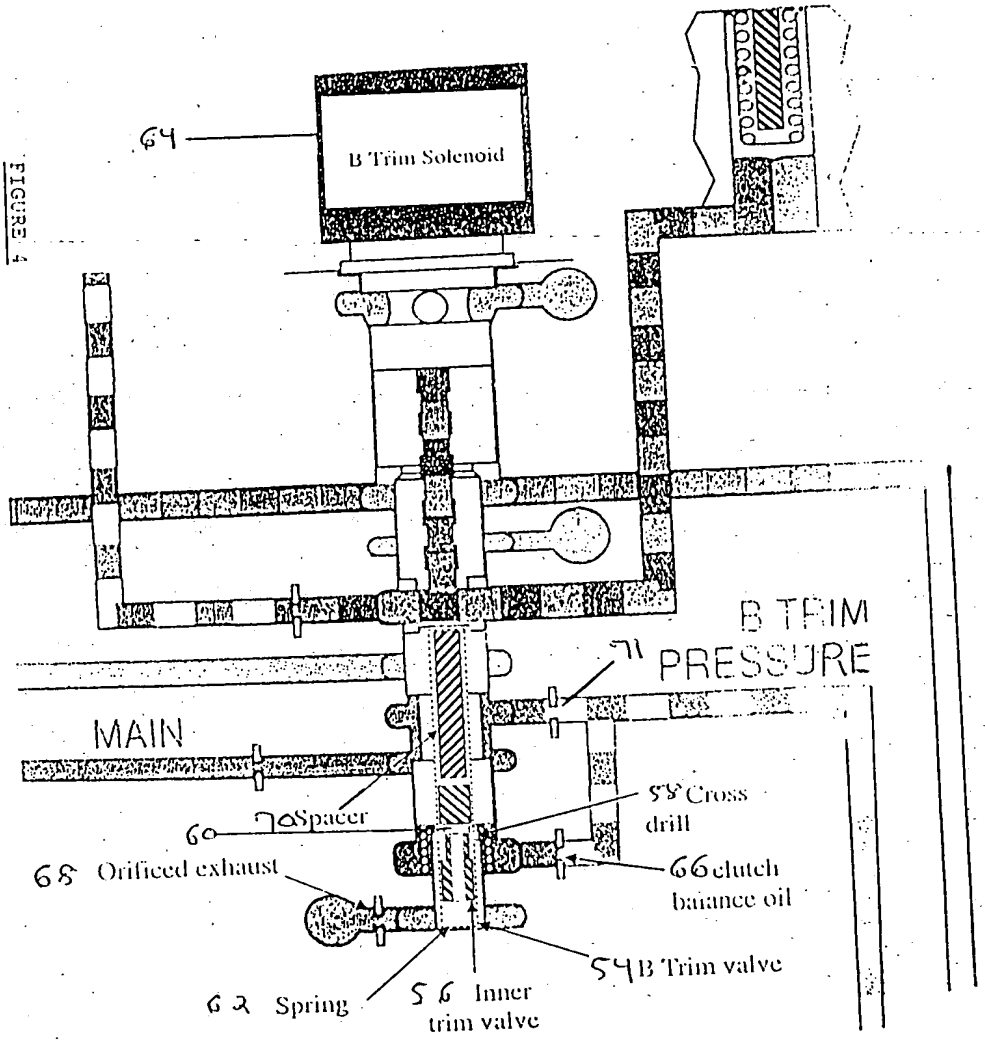
64
B Trim Solenoid
B TRIM
PRESSURE
71
MAIN
60
70 Spacer
58 Cross drill
68 Orificed exhaust
66 clutch balance oil
54 B Trim valve
62 Spring
56 Inner trim valve

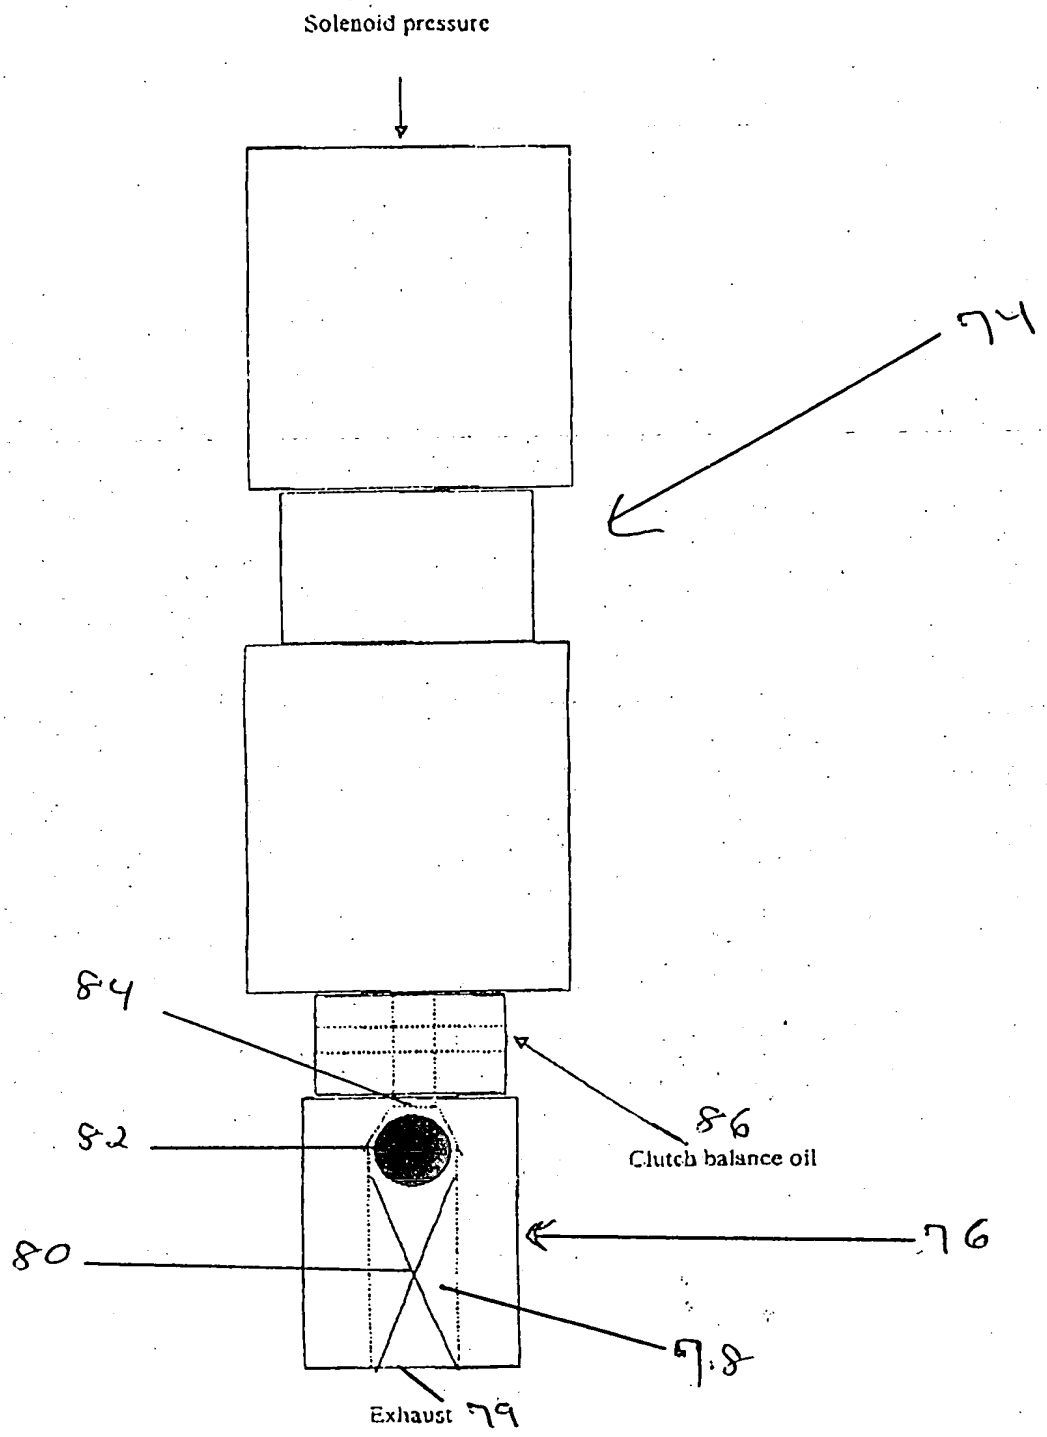
Solenoid pressure
74
84
82
86
Clutch balance oil
80
76
78
Exhaust 79

FIGURE 5